

Vertilux Quick programming

Press button on shade until it jogs

Press Up Button once until the shade jogs

Check direction of arrows

Hold stop for 5s until motor jogs

Press down button for 2 seconds

Set Upper Limit

Raise to 4" below highest point

Press and hold the button on the back of the remote until it jogs

Move the shade to the Upper limit and Press and hold the button on the back of the remote until it jogs

Set Lower Limit

Move shade close to 4" to lower limit

Press and hold the button on the back of the remote until it jogs

Move the shade to the Upper limit and Press and hold the button on the back of the remote until it jogs

Intermediate limit

Move shade to position

Press button on remote until the shade jogs

Erasing Intermediate Limit

Move shade to position

Press button on remote until the shade for 7 seconds until 2 jogs

Sleep Mode- Press pin in motor for a Beep and Jog and Keep holding until you hear a Long Beep

Wake sleep Mode - Press pin in motor for a Beep

Cloning a Channel

Use a previous programmed remote select desired channel then Hold Stop for 5 seconds Until it jogs.

Using a new remote select desired channel and press the Up Button until a jog

Factory Reset

With a Pin tap the Motor 4 times to beep and the fifth time hold until 2 jogs

Adjust Lower Limit after Programming

Move to lower limit / Press and hold button on remote- JOG / Move new location –Press STOP / Press and hold button on remote- JOG